





757-842-6497
WWW.JLOSC.COM

**J&L 3.0 Oil Separator (2005-10 SRT8 6.1L Hemi, Passenger Side)
 #3062P
 Installation Instructions**

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) J&L Oil Separator w/fittings, (1) J&L Mounting bracket, (2) Fine thread machine screws, (1) Mounting bolt, (2) 1/2 1/2" PVC hoses
2	Gather all of the following tools needed for the installation: 13mm socket and ratchet, Phillips screwdriver, hose cutters,
3	Remove the factory PCV hose from PCV valve to manifold
TIP	Use soapy water to help when installing hose onto fittings, it is designed to be very tight and not need clamps
4 & 5	<div style="display: flex; justify-content: space-around;"> <div style="width: 45%;"> <p>Install mounting bracket to engine using supplied bolt.</p>  </div> <div style="width: 45%;"> <p>Install 13" PCV hose onto PCV valve.</p>  </div> </div>
6	Use the 2 supplied fine thread screws to attach the oil separator to the mounting bracket as shown below.
7	Connect long 13" hose to the angled fitting and the 4" hose from the straight fitting to the manifold



To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles. Thank you for your business. If you have any questions, please e-mail info@JLosc.com or call 757-842-6497. Our hours are Monday-Friday. 8:00am – 4:30pm Eastern Time.

J&L Oil Separator co. Lifetime Satisfaction Guarantee. We want you to be a J&L customer for life! Your new J&L product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. www.JLosc.com/warranty
 We guarantee workmanship and even a pathway to discounted upgrades for substantially improved items.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLosc.com for complete return policy.

Disclaimer: J&L Oil Separator co. makes no warranties whatsoever, expressed, or implied, oral or written to any purchasers, except the warranty above. J&L Oil Separator co. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by J&L Oil Separator co. agree to hold harmless and indemnify J&L Oil Separator co. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to J&L Oil Separator co. for any claims arising out of use of its products.