




**757-842-6497**  
**WWW.JLOSC.COM**

## J&L 3.0 Oil Separator (2024 Ford Mustang GT 5.0L with Whipple Supercharger) Clean Side #3092D Installation Instructions

Please review complete instructions prior to installing.

Step #	
1	<b>Verify you have all of the following parts included in the kit:</b> (1) J&L Oil Separator, (1) J&L Mounting bracket, (2) Fine thread machine screws, (1) M6 Bolt
2	<b>Gather all of the following tools needed for the installation:</b> 10mm socket, extension and ratchet, & Phillips screwdriver
3	Remove Whipple PCV line by pushing in both grey tabs and pulling it off the connection at the driver side valve cover and Intake connection. 
4	Install J&L OSC bracket onto the J&L Oil separator using the supplied screws. Align the logos so they're facing the same way.

Locate 10mm bolt holding down the Whipple coolant reservoir, remove bolt. Install J&L Oil Separator assembly into place and use supplied bolt to fasten. Do not tighten the bolt completely yet.



5

Pull EVAP solenoid off its bracket. Route long hose to intake pipe.

**NOTE:** Quick connection fittings will rotate 360 degrees, they may be tough to move initially but after twisting them they will loosen to rotate as needed. If your hose is in a bind, please adjust the connections for optimal hose routing. These are assembled by humans!



6


Route short hose to valve cover connection and push to connect.

Tighten 10mm nut to fully secure assembly.

To remove fittings, press large green button inward while pulling up on fitting. (The button is labeled "PUSH")

Check your oil separator after 1000 miles of driving to gauge how often yours will need to be serviced!! This clean side kit will see little collection under normal driving conditions. The Dirty side kit will see lots!  
Part # 3092P

7

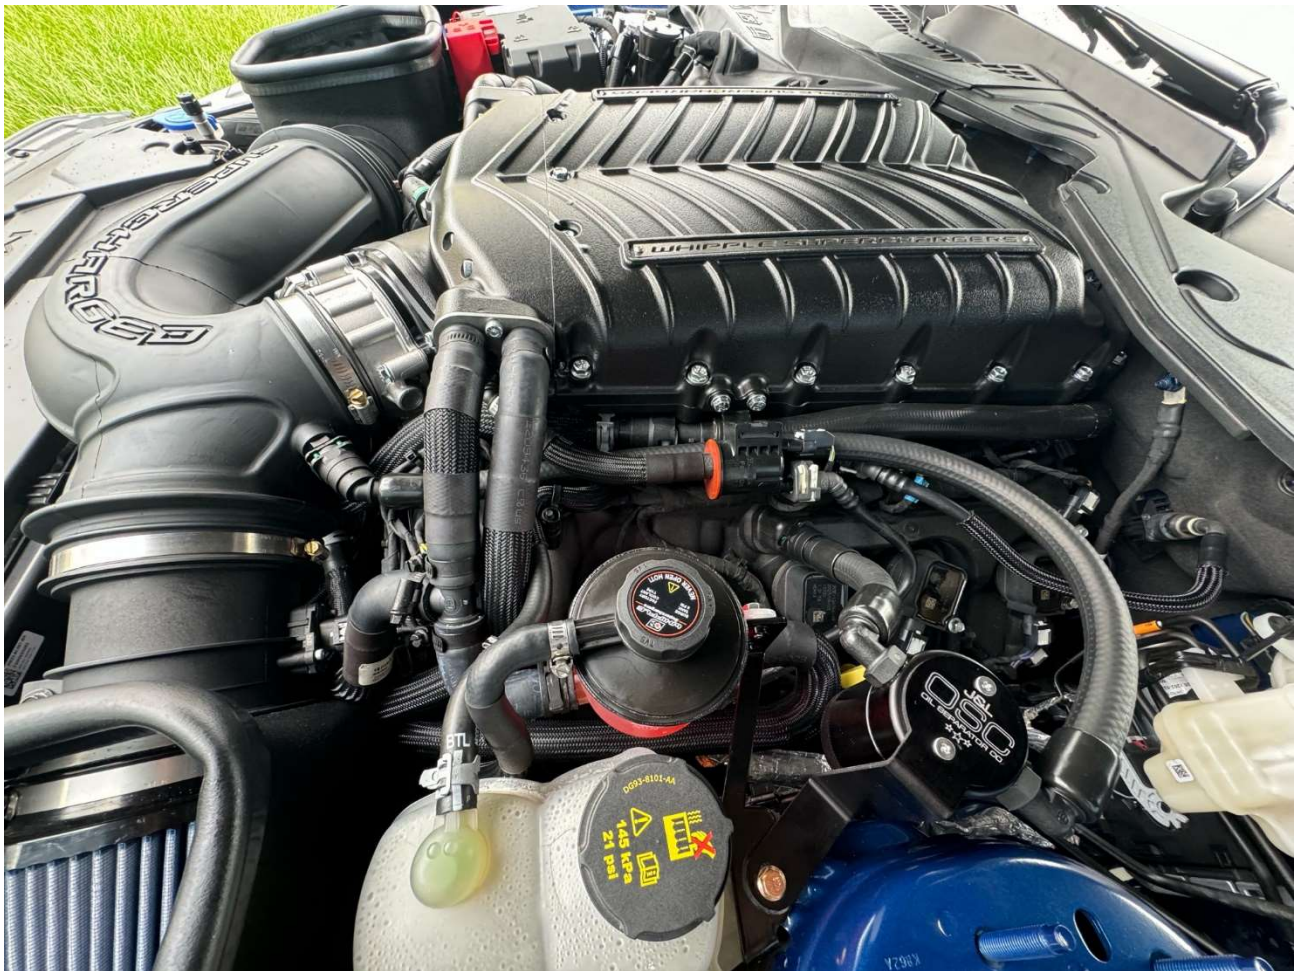

To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles. Thank you for your business. If you have any questions, please e-mail [info@JLosc.com](mailto:info@JLosc.com) or call 757-842-6497. Our hours are Monday-Friday. 8:00am – 4:30pm Eastern Time.

**J&L Oil Separator co. Lifetime Satisfaction Guarantee. We want you to be a J&L customer for life!** Your new J&L product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. [www.JLosc.com/warranty](http://www.JLosc.com/warranty)

We guarantee workmanship and even a pathway to discounted upgrades for substantially improved items.

**Return Policy:** All returns will be subject to a 10%-25% restocking fee. Please visit [www.JLosc.com](http://www.JLosc.com) for complete return policy.

**Disclaimer:** J&L Oil Separator co. makes no warranties whatsoever, expressed, or implied, oral or written to any purchasers, except the warranty above. J&L Oil Separator co. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by J&L Oil Separator co. agree to hold harmless and indemnify J&L Oil Separator co. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to J&L Oil Separator co. for any claims arising out of use of its products.